

ENG




SIM card installation

1. Use the attached pin to remove the slot (press the pin into the hole) for SIM / SD card on the side of the telephone.
2. Insert the SIM card according to a picture on the slot.
3. Replace the slot with the SIM / SD card in its original orientation.

Switching on

Hold the power button until the screen goes on. A guide will take you through settings after the first switching on.

Telephone control buttons

-  Apps: a list of running applications
-  Home: access to desktop
-  Back: previous screen

Safety measures

- Keep the telephone out of the reach of animals and children.
- Protect your ears! Do not use high volume for a long time.
- Switch off the telephone while travelling by plane and when close to electronic medical devices (e.g. a pacemaker).
- Incorrect handling of equipment, battery and accessories, damage or improper repair may result in an explosion or fire.
- Only use the device in the temperature range from 0°C to 40°C.

Disposal of the product



This marking on the product, on accessories or in documentation indicates that the product and electronic accessories (such as charger, headphones, USB cable) should not be disposed of with household waste.



Print errors are reserved. Appearance and layout of controls may vary depending on a particular model and system version.